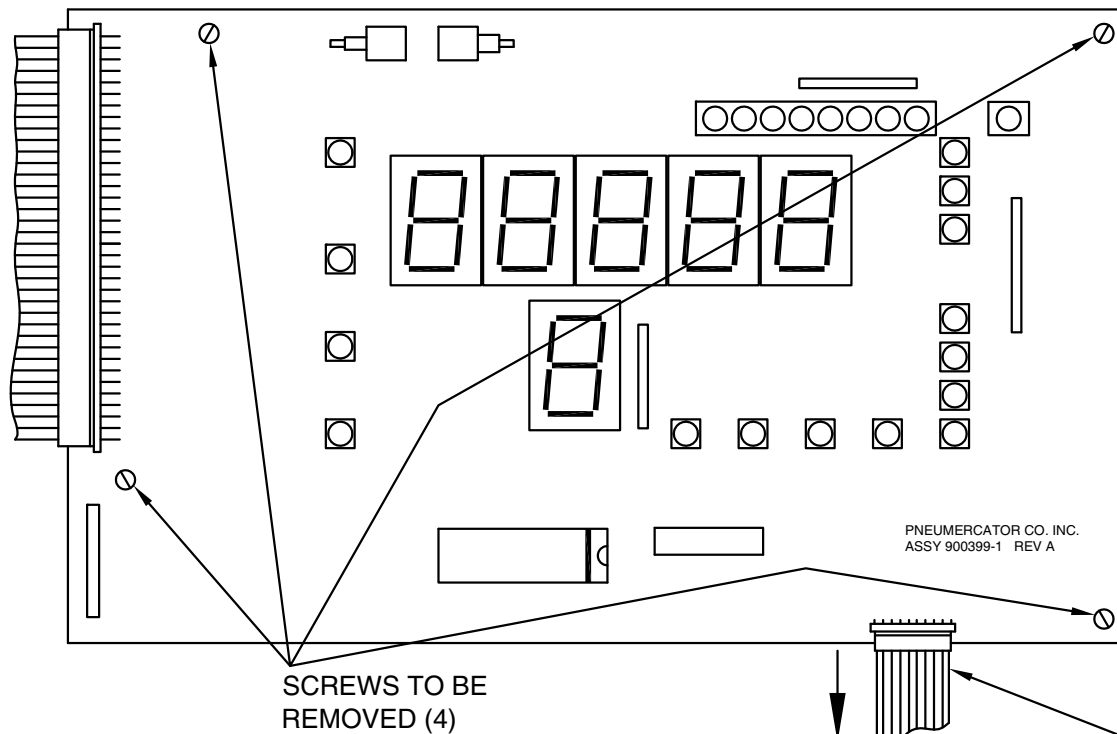
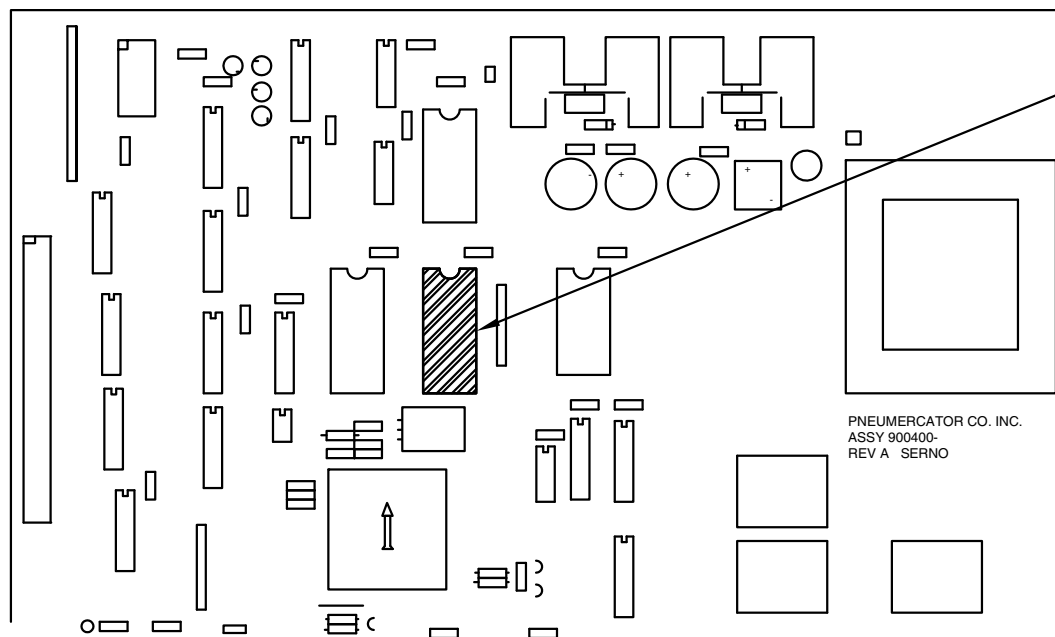


# PROGRAM CHIP REPLACEMENT - MODEL LDE740 CONSOLE



**FIGURE 1**



**FIGURE 2**

## INSTRUCTIONS:

- 1) Disconnect power and open lid.
- 2) Disconnect Display Board Harness, remove (4) screws, and lift Display Board. See figure 1.
- 3) Remove old Program Chip (a chip puller should be used). See figure 2.
- 4) Replace w/new Program Chip (note orientation of notch).
- 5) Replace Display Board and reconnect Display Board Harness.
- 6) Any damage to the unit from this procedure is not the responsibility of Pneumercator Co.

