TMS4000 Quick Reference Guide

Tank Product SetPoint Alarms* **Meter Display Mode** CH Critical High – Above 98% Temperature Uncompensated Gross Volume Gross Volume Temperature Uncompensated (BBL) (GAL) Volume (Barrels) Volume (Gallons/Liters) High High Above 95% Temperature Compensated Net Volume Net Volume Temperature Compensated (NBBL) (NGAL) Volume (Barrels) Volume (Gallons/Liters) Ullage (UBBL) Maximum Delivery Amount Ullage Н High Maximum Delivery Amount Above 90% (ULLG) (Barrels) (Gallons/Liters) Product Height Product Height Low Below 20% Total Height of Liquid Total Height of Liquid (Feet + Inches) (FTP) (INP) (Inches/Millimeters) Low Low Below 15% Percent Volume Gross Volume/Tank (% VOL) Capacity x 100% Critical Low -Below 12% Water Height **Bottom Water Height** (IN W) (Inches/Millimeters) Temperature (TEMP) Volume-Weighted average **System Alarm Status** Product Temperature (°F/°C) and Acknowledgment System Normal Unacknowledged TMS 4000 ||||| PNEUMERCATOR Alarms* Acknowledged Ethanol **Alarms** Touch to silence front panel horn and access alarm acknowledgment screen. See back for details. Power On System Normal Alarm* **Sensor Alarm Status** and Acknowledgment All sensors normal Tank Alarm/Activity Alarms* **Priority Window** Wiring/Sensor faults **Tank Status** Touch to view details Tank Active **Tank Alarms** Product Increase _ **CC Input Alarm Status** Product, Water and Temperature Product Decrease and Acknowledgment SetPoints, Theft. Leak Test In Progress All CC Inputs normal Failed In-Tank Leak Test Ungaugeable Level Warning Alarm and/or Activity*

* For All Alarms, Blinking indicates unacknowledged condition

Touch to view details

Probe Errors

Site NameSite Location	Tech Support Phone Emergency Phone
	<u> </u>

TMS4000 Quick Reference Guide



Current Alarms



General Alarm: Tank Product, Water, and Temperature SetPoints, Leak/Point Level Sensor, Contact Closure Input




Failed In-Tank Leak Test



Theft



System Errors: Probe Errors, Sensor Wiring Faults

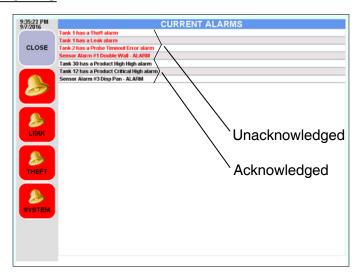

SENSORS

Leak/Point Level Sensor Statuses






Alarm or Active*



Wiring/Sensor Fault*

* Touch individual Sensor panel for details.

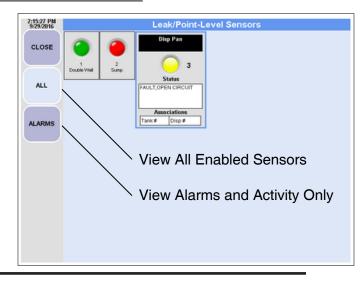



Contact Closure Input Statuses



Normal: No Alarm or Activity



Alarm or Active*

* Touch individual CC Input panel for details

