


INSTRUCTION MANUAL

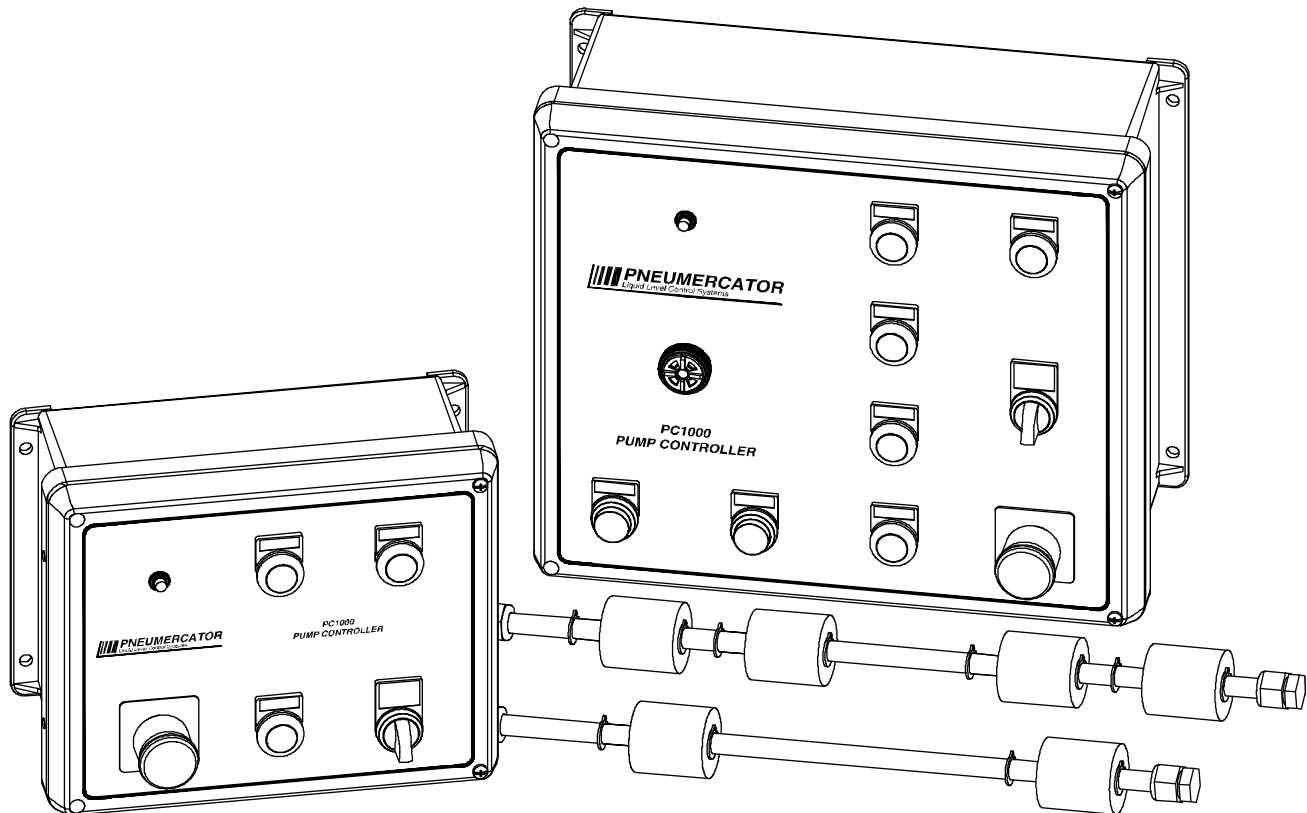

DRAWING NO. 20147 REV. N/C

PC1000 SERIES

**© COPYRIGHT 2017 PNEUMERCATOR CO., INC.
1785 EXPRESSWAY DRIVE NORTH
HAUPPAUGE, NY 11788**

(631) 293-8450 Phone
(631) 293-8533 Fax
(800) 209-7858 Support
www.pneumercator.com

TABLE OF CONTENTS

| | Page |
|---|------|
| SAFETY INFORMATION..... | 5 |
| Section 1 PRODUCT DESCRIPTION | |
| 1.1 General System Overview | 6 |
| 1.2 Control Console Description | 7 |
| 1.3 Liquid Sensor Description..... | 10 |
| Section 2 INSTALLATION DETAILS | |
| 2.1 Installation Checklist..... | 11 |
| 2.2 Control Console Installation..... | 12 |
| 2.3 Sensor Installation | 13 |
| Section 3 WIRING INSTALLATION AND DIAGRAMS | |
| 3.1 PC Board Setup and Layout..... | 14 |
| 3.2 System Wiring..... | 16 |
| 3.3 Sensor Map/System Setup | 22 |
| 3.4 Installation as a Remote Alarm Panel..... | 22 |
| Section 4 OPERATION | |
| 4.1 General..... | 23 |
| 4.2 Horn Control | 23 |
| Section 5 TROUBLESHOOTING | |
| 5.1 General..... | 24 |
| 5.2 Spare Parts List..... | 24 |
| Section 6 MAINTENANCE/TESTING | |
| 6.1 Console..... | 25 |
| 6.2 Sensors..... | 25 |

⚠ IMPORTANT SAFETY INFORMATION

This manual contains instructions for installing electrical hardware in explosion hazard areas.

The following warnings must be considered to be in compliance with accepted codes.

Any inquiries about this manual, or to return defective equipment should be directed to:

**PNEUMERCATOR COMPANY
1785 EXPRESSWAY DRIVE NORTH
HAUPPAUGE, NY 11788
Attention: Technical Services
TEL: (631) 293-8450
FAX: (631) 293-8533
TOLL FREE: (800) 209-7858
www.pneumercator.com**

⚠ WARNING

Installation must be in strict accordance with this manual as adopted from the following codes:

- ISA RP12.6, "Installation of intrinsically Safe Instrument Systems in Class I Hazardous Locations."

- NFPA 70, "National Electric Code."

- NFPA 30A, "Automotive and Marine Service Station Code."

FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.


⚠ WARNING

Alteration, modification or replacement with non-factory components could impair the intrinsic safety of this equipment, and void the warranty. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

SECTION 1 – PRODUCT DESCRIPTION

1.1 GENERAL SYSTEM OVERVIEW

The basic function of the Model PC1000 Pump Control console is to provide automated pump and/or solenoid valve control at the occurrence of high, or low levels: typically via float switches, or any tank mounted sensing device that transmits a condition by opening or closing dry switch contacts. The console also includes a momentary manual override switch to provide the user with the means of bypassing the automated controls. An Emergency Stop switch is also provided to immediately stop the pump should a critical situation arise. The PC1000 may also be used as a non-intrinsically safe remote pump control panel for any system that provides a dry contact relay output to represent a specific set of conditions. The console is powered by 120 VAC and includes an integrated Pump On light and AC Power light. The PC1000 also provides 2 to 4 input channels each with a corresponding light. Each input consists of a pair of intrinsically safe terminals for wiring to field mounted switches. The intrinsically safe inputs allow mounting the switches in explosion hazard environments without requiring additional protective barrier components in the wiring runs. Start and Stop pump control inputs manipulate the integrated Pump Control Output Relay. For every alarm input, there is a single dry contact relay output that can be used to signal a remote alarm device or control an external electrical device, such as a solenoid valve, up to 3A @ 120 VAC.

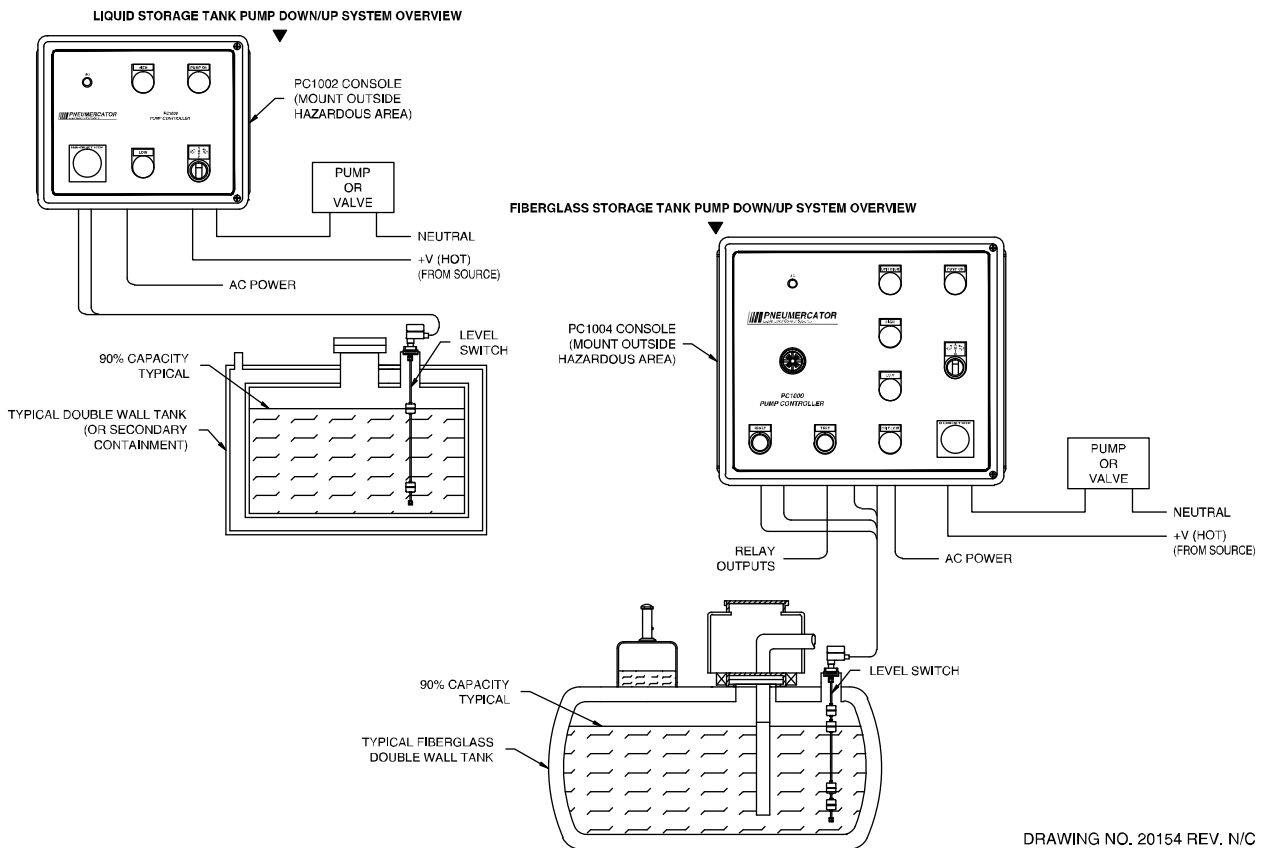

DRAWING NO. 20154 REV. N/C

Figure 1-1 - PC1000 Series Overview

1.2 CONTROL CONSOLE DESCRIPTION

The console is housed in a NEMA 4X (weather tight/corrosion resistant) FRP (fiberglass reinforced plastic) enclosure for mounting in the non-hazardous area. Each unit operates on 120 VAC power and provides from two (2) to four (4) intrinsically safe alarm channels for monitoring up to four independent sensing points. The electrical energy output at each channel is 12 VDC at 15 mADC maximum, and is zener barrier protected. A green AC power LED, bright yellow High and Low pump control LEDs, a green Pump On LED, red alarm LEDs, one for each alarm channel, and a horn are mounted to the enclosure cover.

Each alarm channel is equipped with a 1 Form C output relay, totally isolated from the sensor inputs, rated for 3A@120VAC, for controlling external devices such as remote alarm annunciators. All field wiring is made through pressure-type terminal blocks enclosed under metal barriers to separate the power from the intrinsically safe wiring. Figures 1-2 and 1-3 illustrate the standard PC1000 outline, mounting flange locations, and dimensions.

The console should be located in an area that is easily accessible to the personnel responsible for operation and maintenance of the system. Use only dedicated conduit entries for their designated purpose as specified in Figure 1-4. Metal conduiting is recommended and may be required by local codes. All outdoor conduits must be watertight.

⚠ WARNING

Installation MUST be done by qualified personnel familiar with local wiring codes and explosion hazard electrical safety practices. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

⚠ WARNING

The console is designed for Ordinary Location, Non-Hazardous installation only, as defined by the National Electrical Code (NEC). DO NOT install where flammable vapors may be present. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

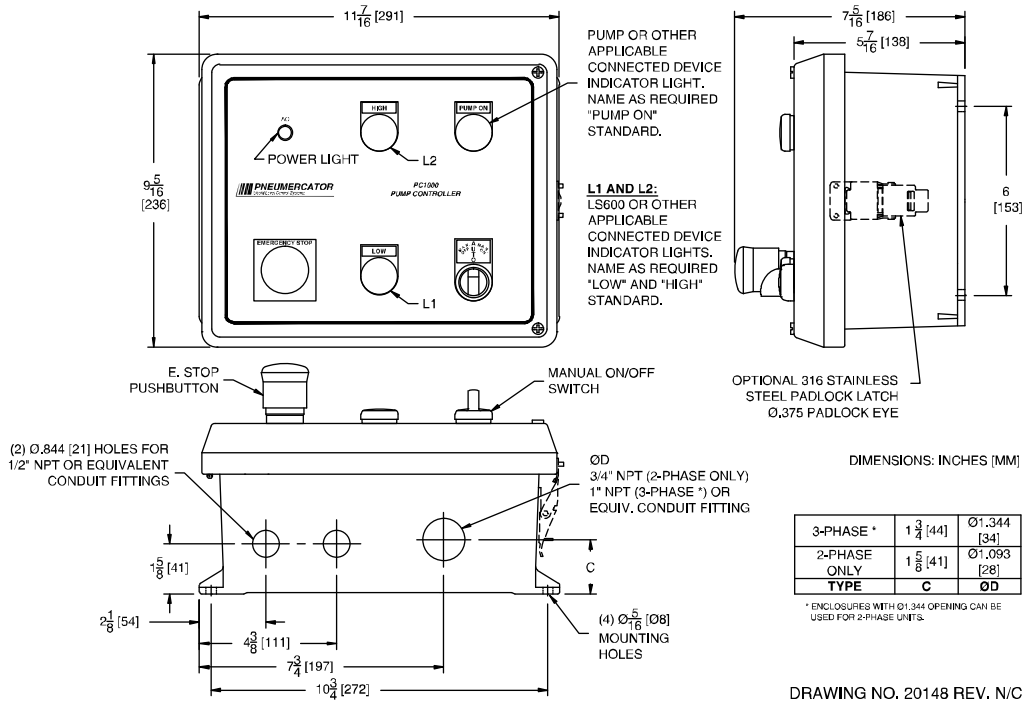


Figure 1-2 - PC1002 Console Outline

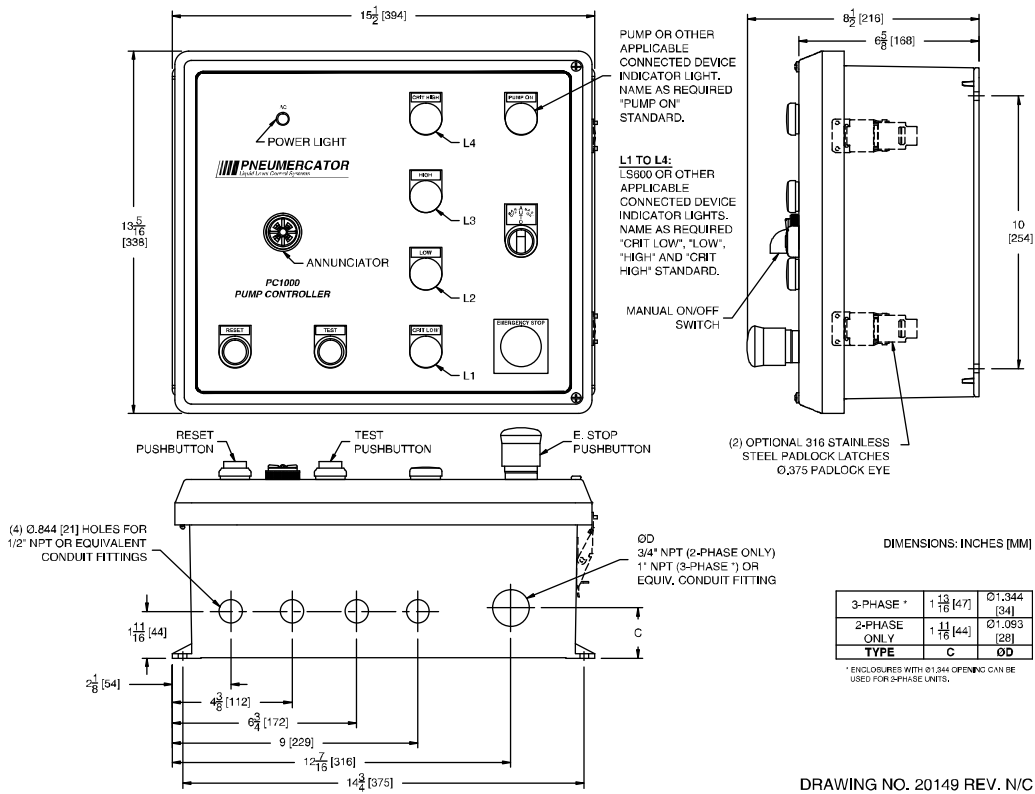



Figure 1-3 - PC1003/4 Console Outline

⚠ WARNING

Do not drill or modify enclosure. Use only conduit entries provided. FAILURE TO COMPLY WILL VOID WARRANTY AND MAY PRESENT A SAFETY HAZARD RESULTING IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

⚠ WARNING

Conduit entries must only be used for their designated purpose in order to assure safe operation and to maintain safety certification. FAILURE TO COMPLY WILL VOID WARRANTY AND MAY PRESENT A SAFETY HAZARD RESULTING IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

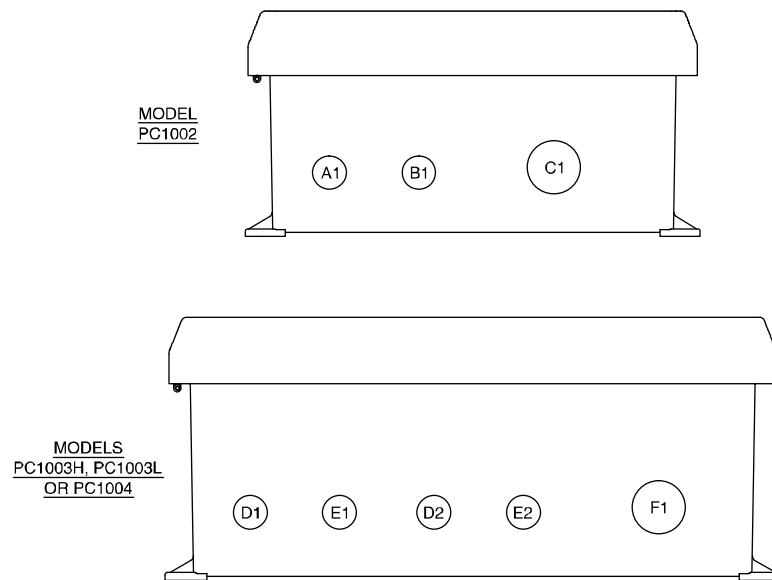

**NON-INTRINSICALLY SAFE
CONDUIT OPENINGS AND
DESIGNATED USES:**

1/2" NPT CONDUIT SIZE *

PC1002:
B1 = POWER
PC1003H, PC1003L OR PC1004:
E1 = RELAY OUTPUT(S)
E2 = POWER

3/4" NPT CONDUIT SIZE * (2-PHASE UNITS ONLY)
1" NPT CONDUIT SIZE * (2 & 3-PHASE UNITS)

PC1002:
C1 = PUMP CONTROL OUTPUTS
PC1003H, PC1003L OR PC1004:
F1 = PUMP CONTROL OUTPUTS

**INTRINSICALLY SAFE
CONDUIT OPENINGS AND
DESIGNATED USES:**

1/2" NPT CONDUIT SIZE *

PC1002:
A1 = EARTH GROUNDS & I.S. INPUTS
PC1003H, PC1003L OR PC1004:
D1 = I.S. INPUT(S)
D2 = EARTH GROUNDS & I.S. INPUTS

* OR EQUIVALENT

DRAWING NO. 20151 REV. N/C


Figure 1-4 - PC1000 Conduit Usage

1.3 LIQUID SENSOR DESCRIPTION

The PC1000 is typically integrated with the LS600 family of sensors used for monitoring in-tank levels. The maximum number of supported floats is 4, depending on the overall job configuration; check the specific job design drawings for the actual number and type specified. Figure 1-5 shows the LS600 sensor provided by Pneumercator with their most typical applications. Other non-Pneumercator models may be used; however, their use with the PC1000 should have been approved by Pneumercator and local regulators before attempting to wire them into the system.


LS600, LS600 OW OR LS600A *

LS600A NCL

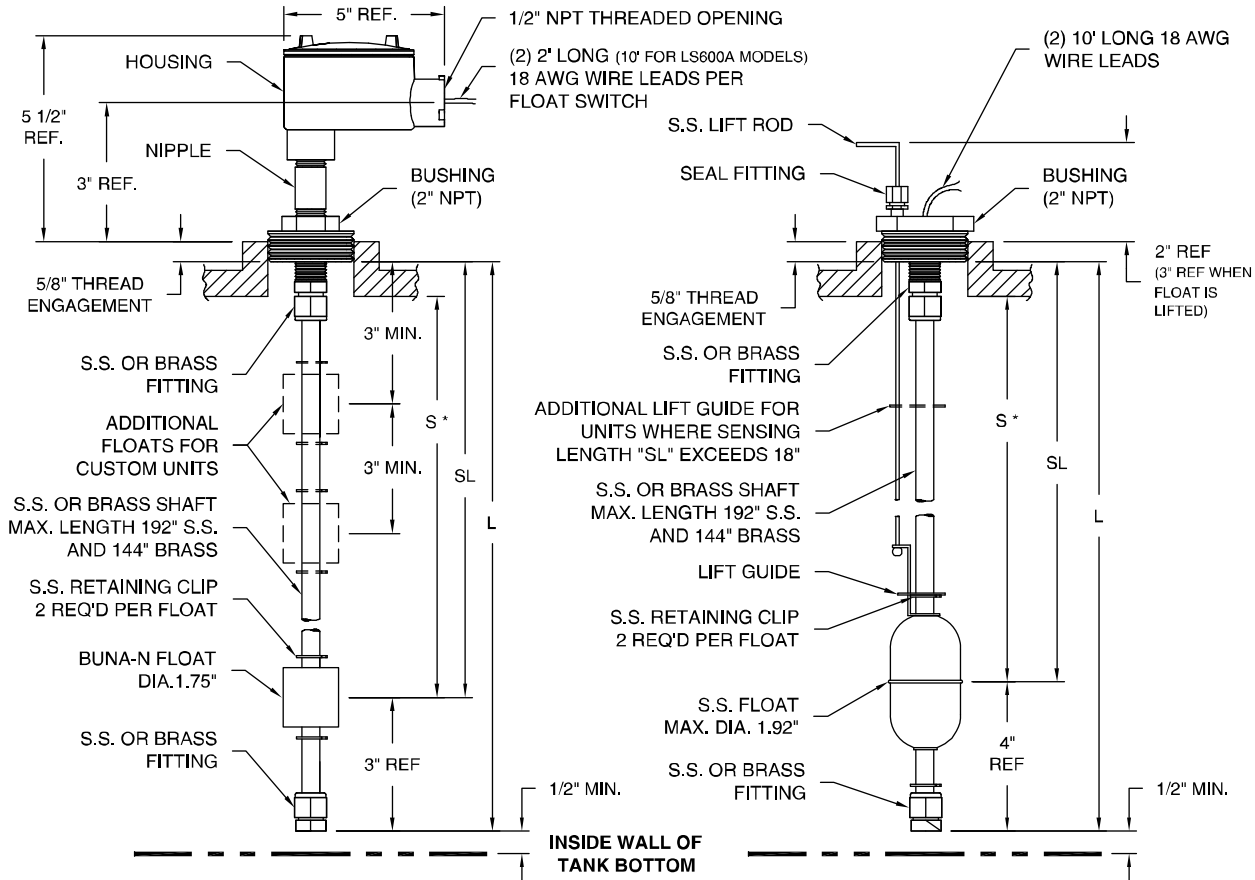

* LS600 OW SERIES SUPPLIED WITH STAINLESS FLOATS. HOUSING, NIPPLE & BUSHING NOT SUPPLIED ON LS600A SERIES.

NOTE
 CUSTOM MINIATURE LS600s ARE AVAILABLE FOR SUB BASE OR GENERATOR TANKS THAT REQUIRE SET POINTS TO BE CLOSER TOGETHER AND/OR TANKS WITH SMALLER THREADED OPENINGS. SEE OUTLINE DRAWING 10620.

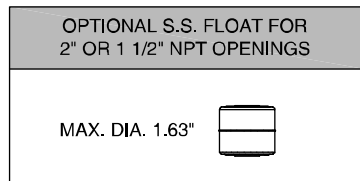

DRAWING NO. 20057 REV. A

Figure 1-5 – LS600 Series

(Refer to Bulletin 193 for Installation/Operation/Testing Instructions)

SECTION 2 – INSTALLATION DETAILS

2.1 INSTALLATION CHECKLIST

⚠ WARNING

Do NOT apply power to the PC1000 until its installation has been checked and found to be in accordance with these instructions; National Electric Code; Federal, State and Local codes; and other applicable safety codes. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

The following points should be reviewed in preparation for installation, and again when installation is complete.

1. Review the applicable wiring diagram from Figures 3-2 through 3-5 to ensure that all of the safety/wiring requirements have been met.
2. Check that all equipment at job site matches the DESIGN DRAWING SPECIFICATIONS for the tank sizes and control features required.
3. The console should be located as close as possible to the demarcation point of the hazardous area. **Never mount inside the hazardous area.**
4. POWER to the console should be properly wired to a DEDICATED 120 VAC CIRCUIT BREAKER. No other equipment can be powered from the same circuit breaker as the PC1000.
5. System cannot be connected to equipment that uses or generates more than 250 volts with respect to earth.
6. All PC1000 grounds must be terminated at the GND BUSS BAR in the same service panel as PC1000 power. A grounding rod, coldwater pipe or other connection should not be used.
7. **Do not drill or modify enclosure.** Use only conduit entries provided. Failure to comply will void warranty and may present a safety hazard.
8. WATERPROOFING FIELD WIRE SPLICES using factory supplied splice kits is required for proper system operation.

2.2 CONTROL CONSOLE INSTALLATION

The console is the center of operations for any tank monitor system therefore its location should be selected for the operators convenience, or as specified on the DESIGN DRAWINGS.

Select a flat wall surface and prepare it with four wall-mounting inserts to accept up to 1/4-inch size bolts. Allow sufficient room for door to open and for conduit runs to enter **ONLY THE CONSOLE BOTTOM**. See Figures 1-2 or 1-3 for the appropriate console dimensions.

Note that the console is divided into two electrical areas:

INTRINSICALLY SAFE (LEFT SIDE)
for Sensor signals and IS Earth Grounds

NON INTRINSICALLY SAFE (RIGHT SIDE)
for Power and Control

Figures 2-1 and 2-2 show the console interior, again indicating the power and signal separation. **THIS SEPARATION MUST BE MAINTAINED** when conduits are connected. Refer to Section 3 for electrical conduit and wiring.

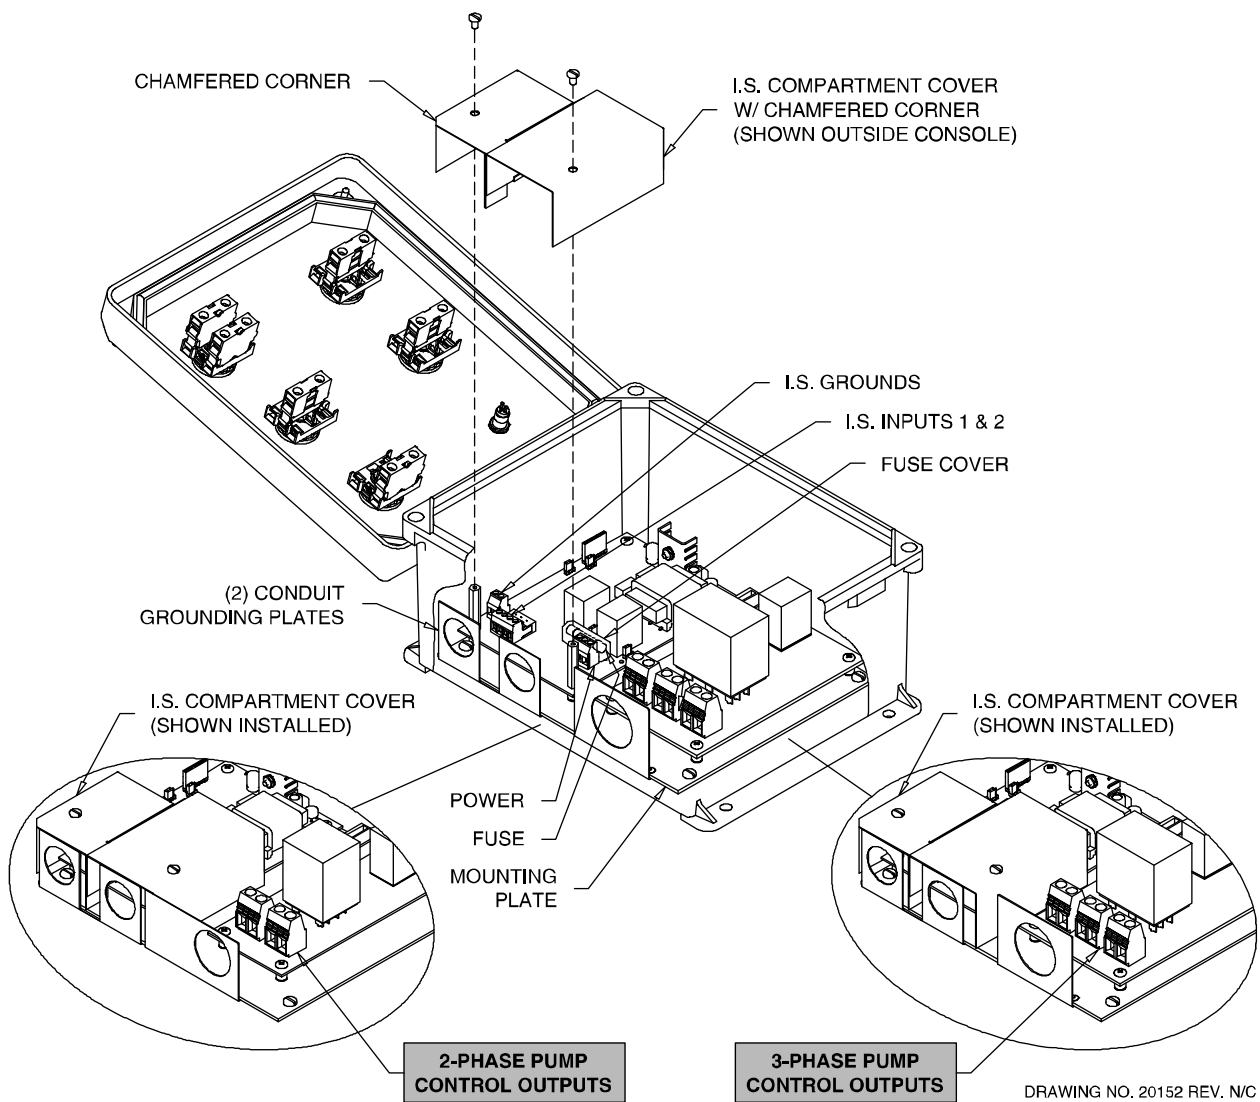
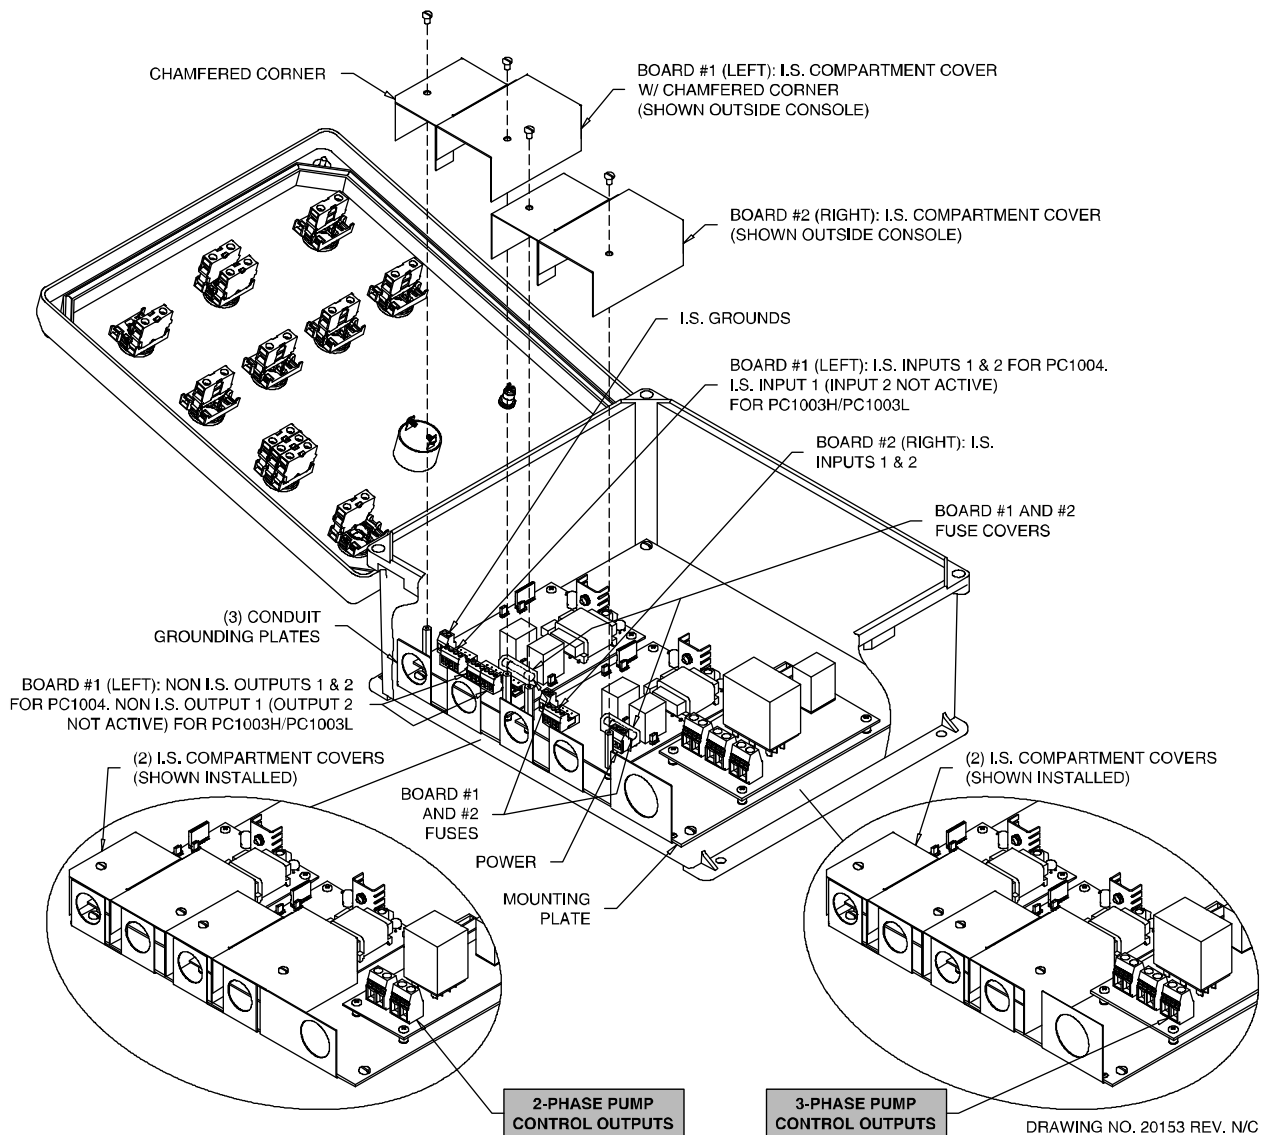


Figure 2-1 – PC1002 Control Console Interior



**Figure 2-2 – PC1003/1004 Control Console Interior
(PC1004 shown)**

2.3 IN-TANK POINT SWITCHES

The PC1000 has the electrical ability to read the continuity state of any dry contact sensor. As such, this system will support a variety of sensors from various manufacturers. However, your local regulations may not permit this combination as the PC1000 has not been specifically approved for use with sensors not manufactured by Pneumercator. Please consult with your local regulators and with Pneumercator to discuss the compatibility of your particular sensor with the console and application.

The LS600 Sensor is covered in its own Instruction Bulletin 193 with the splice kit for the sensor covered by Bulletin 179.

These bulletins were supplied with each sensor and may also be downloaded from www.pneumercator.com by visiting the Tech Support section and scrolling down to Bulletins.

SECTION 3 WIRING INSTALLATION AND DIAGRAMS

3.1 PC BOARD LAYOUT AND SETUP

The PC1000 Series includes either two (PC1002) or three (PC1003/PC1004) PC boards within the enclosure. The right-hand board is the Pump Control Output Relay Board. The remaining PC Boards will be setup at the factory for either Normally Open or Normally Closed operation. If there are two PC Boards, excluding the Pump Control Output Relay Board, in a single enclosure, they are considered to be a board set. This is due to the fact that both boards are interconnected via a set of wires behind the PC Boards. Do not make any attempts to remove these wires as they contain live voltage and will also void the system warranty. All repairs to the boards must be performed at the factory.

⚠ WARNING


Jumper settings must be left as set at the factory, in order to assure safe operation and to maintain safety certification. FAILURE TO COMPLY WILL VOID WARRANTY AND MAY PRESENT A SAFETY HAZARD RESULTING IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

| ITEM | FUNCTION | | | | | | | | | | | |
|----------------------------|--|-----------|--|-----|-----|-----|--|---|----|----|---|----|
| TB1 | Sensor Terminal Block | | | | | | | | | | | |
| TB2 | Power and Relay Contact Terminal Block | | | | | | | | | | | |
| TB3 | Intrinsically Safe Earth Ground Terminal | | | | | | | | | | | |
| F1 | Power Fuse: 0.1 Amp, Slo-Blow | | | | | | | | | | | |
| JP3- JP6 (Jumper Plugs) | Relay Control Jumper Plug Schedule/Each PC Board | | | | | | | | | | | |
| | Field Sensor Normal Condition (See note 1) | | Jumper Position on PC Board (See note 3) | | | | Dry Contacts Output at Terminal Block TB2 (See note 2) | | | | | |
| | Input 1 | Input 2 | JP3 | JP4 | JP5 | JP6 | 1 | 2 | 3 | 4 | 5 | 6 |
| | N. Open | N. Open | A-B | D-E | U-V | X-Y | CL | C | OP | CL | C | OP |
| | N. Closed | N. Closed | A-C | D-F | U-W | X-Z | OP | C | CL | OP | C | CL |
| | Failsafe operation is provided with N. closed contacts. Relays energized in normal mode; de-energized on alarm. | | | | | | | | | | | |

NOTE 1: EACH INPUT SWITCH MUST BE LEFT AS SET AT THE FACTORY. PLEASE CONTACT FACTORY WITH SERIAL NUMBER FOR SYSTEM SPECIFIC SETTINGS.

NOTE 2: C=Common, CL=Closed Contact, OP=Open Contact; with relay de-energized.

NOTE 3: JP4 is not present on PC1003 Alarm Input Board

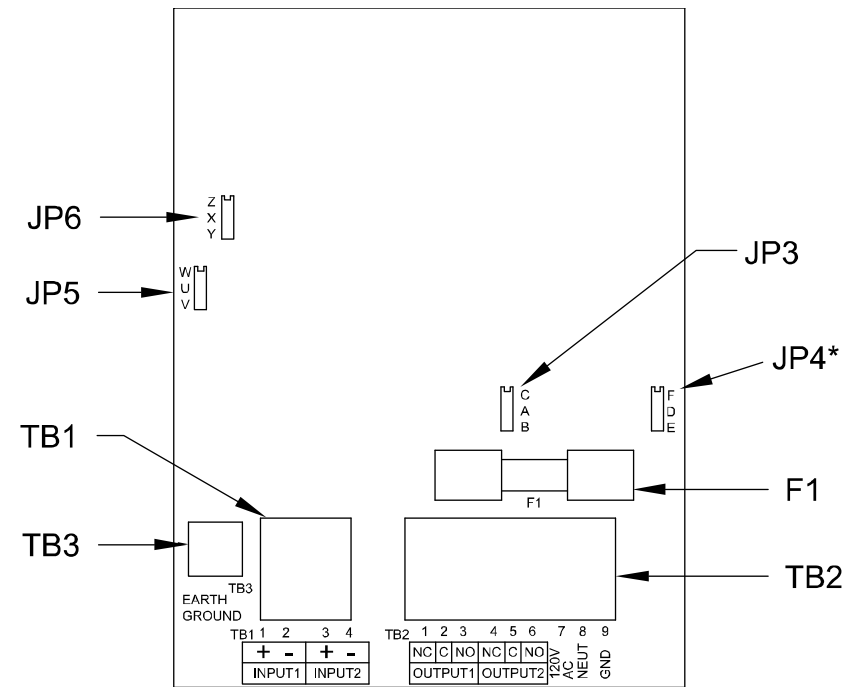

* Jumper location not present on PC1003 Alarm Input Board

Figure 3-1 – PC1000 Location of Jumpers and other key features (PC1002 PC Board shown)

⚠ CAUTION

While the console must NOT be located within the defined hazardous area, the sensors and associated wiring can be. For these applications, it is CRITICAL that electrical conduit and wiring be installed by qualified installers familiar with all provisions of the National Electrical Code relating to equipment intended for use in EXPLOSION HAZARD areas. The primary concern is to maintain physical separation between intrinsically safe and non-intrinsically safe wiring by running separate conduit attached to the control console at the designated knockouts. ALL conduits carrying sensor wiring into the hazardous area MUST be fitted with standard vapor seal-off fittings where the conduit first enters the non-hazardous area. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

3.2 SYSTEM WIRING

Figures 3-2 through 3-5 are typical System Wiring Diagrams that must be followed when running conduit and wires between the HAZARDOUS TANK area and the NON-HAZARDOUS CONSOLE area. This follows electrical codes for proper installation.

SENSOR WIRING INSTALLATION. Refer to Figures 1-4 and 1-5 for console conduit openings and the LS600 sensor that will be wired into the PC1000 system. Install wiring as follows:


1. Install 1/2" rigid conduit from all sensor areas to the PC1000 console.

⚠ CAUTION

All sensor wiring from the PC1000 console may be run in the same conduit. NO OTHER WIRING MAY BE RUN IN THESE CONDUITS. NEVER RUN POWER WIRES IN THESE CONDUITS. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

2. At appropriate locations along the conduit runs (see LS600 Instruction Bulletin 193) install watertight couplings and approved VAPOR SEAL-OFF fittings.
3. At each sensor location install a WATERTIGHT ELECTRICAL JUNCTION BOX. Allow enough room around the sensor tank fitting for proper installation of the sensor and all conduit/junction box fittings, and for later removal if necessary.
4. Attach the conduit at the PC1000 console ONLY to the 1/2" conduit knockout designated for Intrinsically Safe wiring (see Figure 1-4). Use NEMA 4 fittings for outdoor locations.
5. The alarm console is separated into two wiring sections, for each printed circuit board, by an aluminum cover. The wiring and terminal block on the left side are intrinsically safe and are physically separated from the AC power wiring on the right side. This separation must be maintained. Remove the protective cover by loosening the two hold-down screws. **IMPORTANT - SEPARATION BETWEEN INTRINSICALLY SAFE AND NON-INTRINSICALLY SAFE WIRING MUST BE MAINTAINED.**
6. Pull properly marked 2-conductor wiring for each sensor through the conduit leaving at least 24 inches excess at both console and junction box ends for final connections. The field wires must be resistant to hydrocarbon liquids; type THHN or MTW, 22 AWG is recommended.
7. Fill all conduit VAPOR SEAL-OFF FITTINGS with approved filling compound and tighten all conduit fittings.
8. Splice all sensor wires to the respective conduit wires at each WATERTIGHT JUNCTION BOX. (See Bulletin for a recommended procedure). Maintain correct color-coding for wires.

Figure 3-2 – PC1002-2P Wiring Diagram

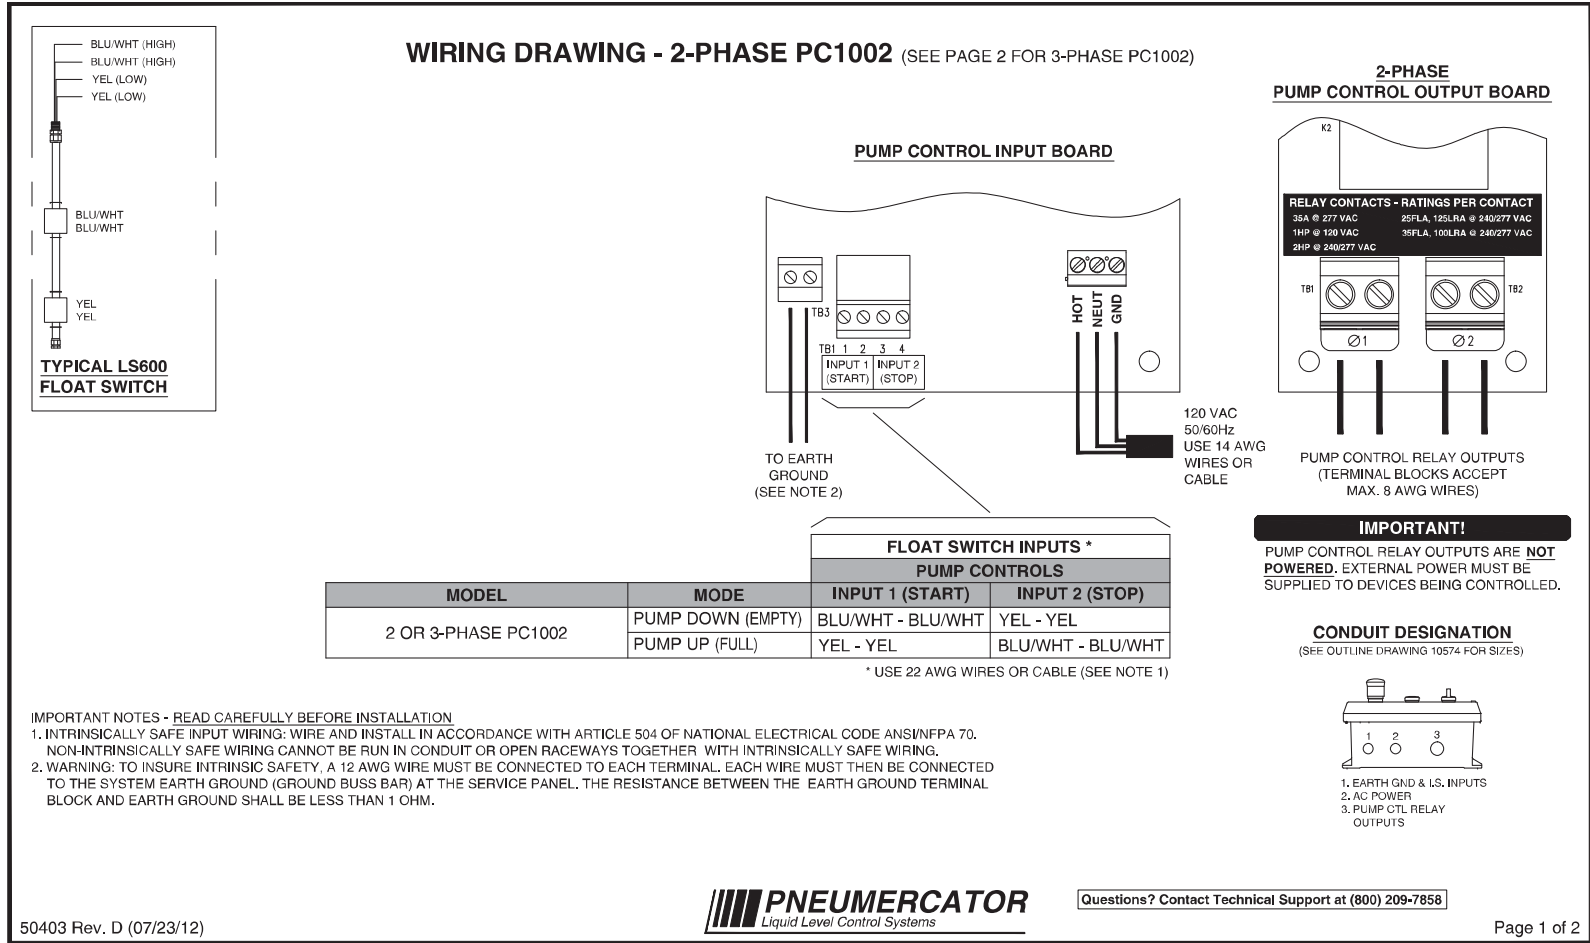

50403 Rev. D (07/23/12)



Questions? Contact Technical Support at (800) 209-7858

Figure 3-3 – PC1002-3P Wiring Diagram

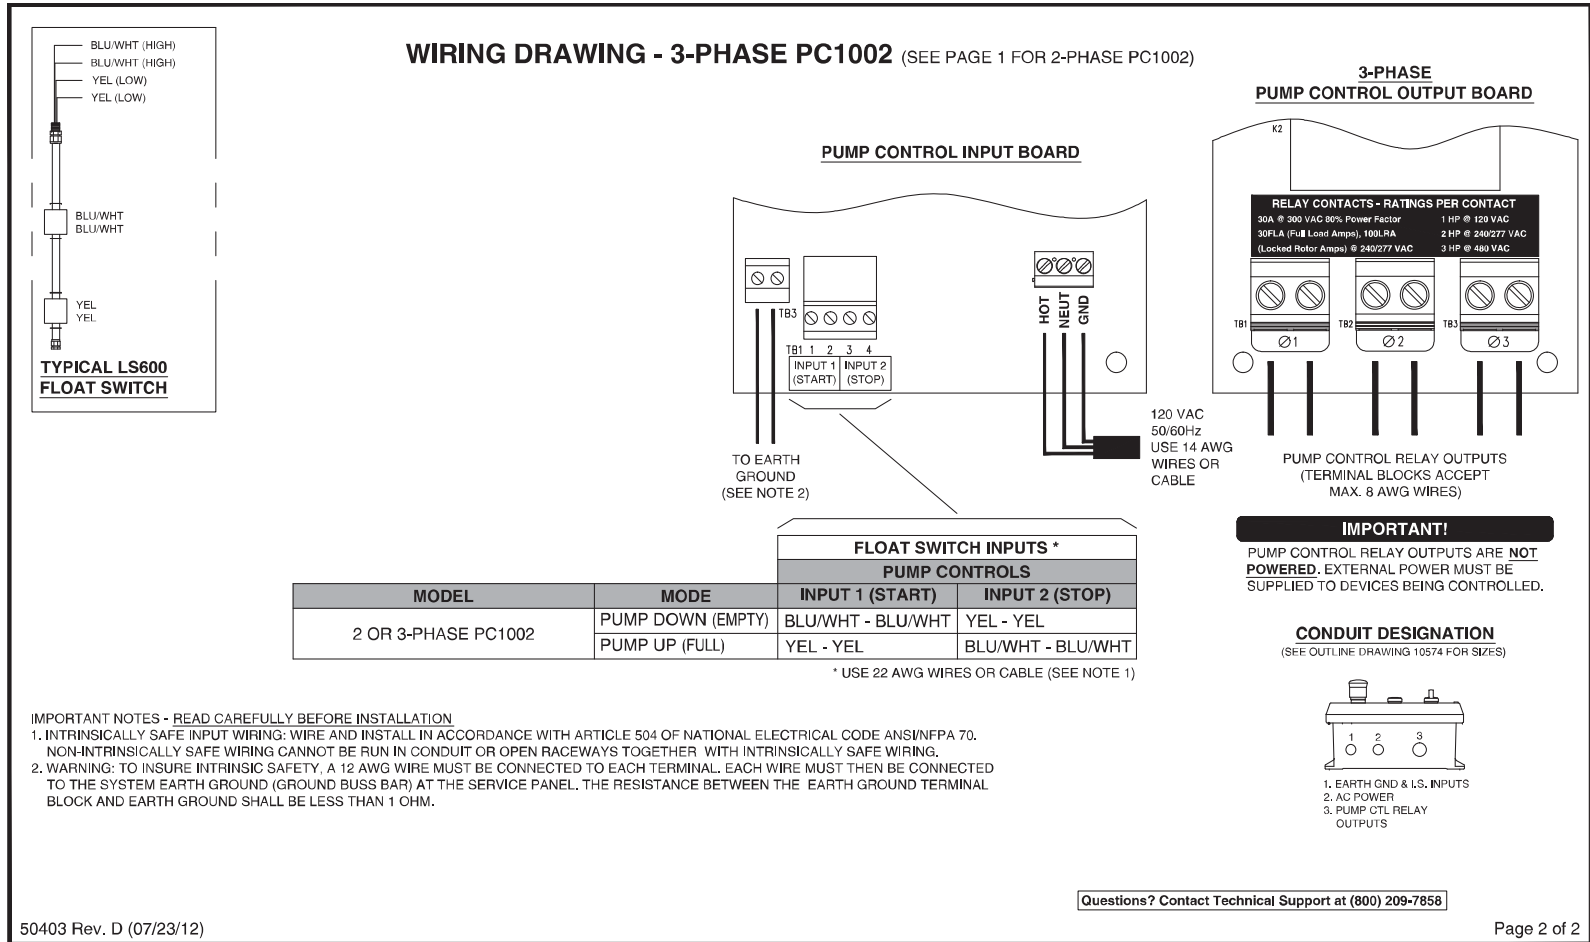


Figure 3-4 – PC1003-2P / PC1004-2P Wiring Diagram


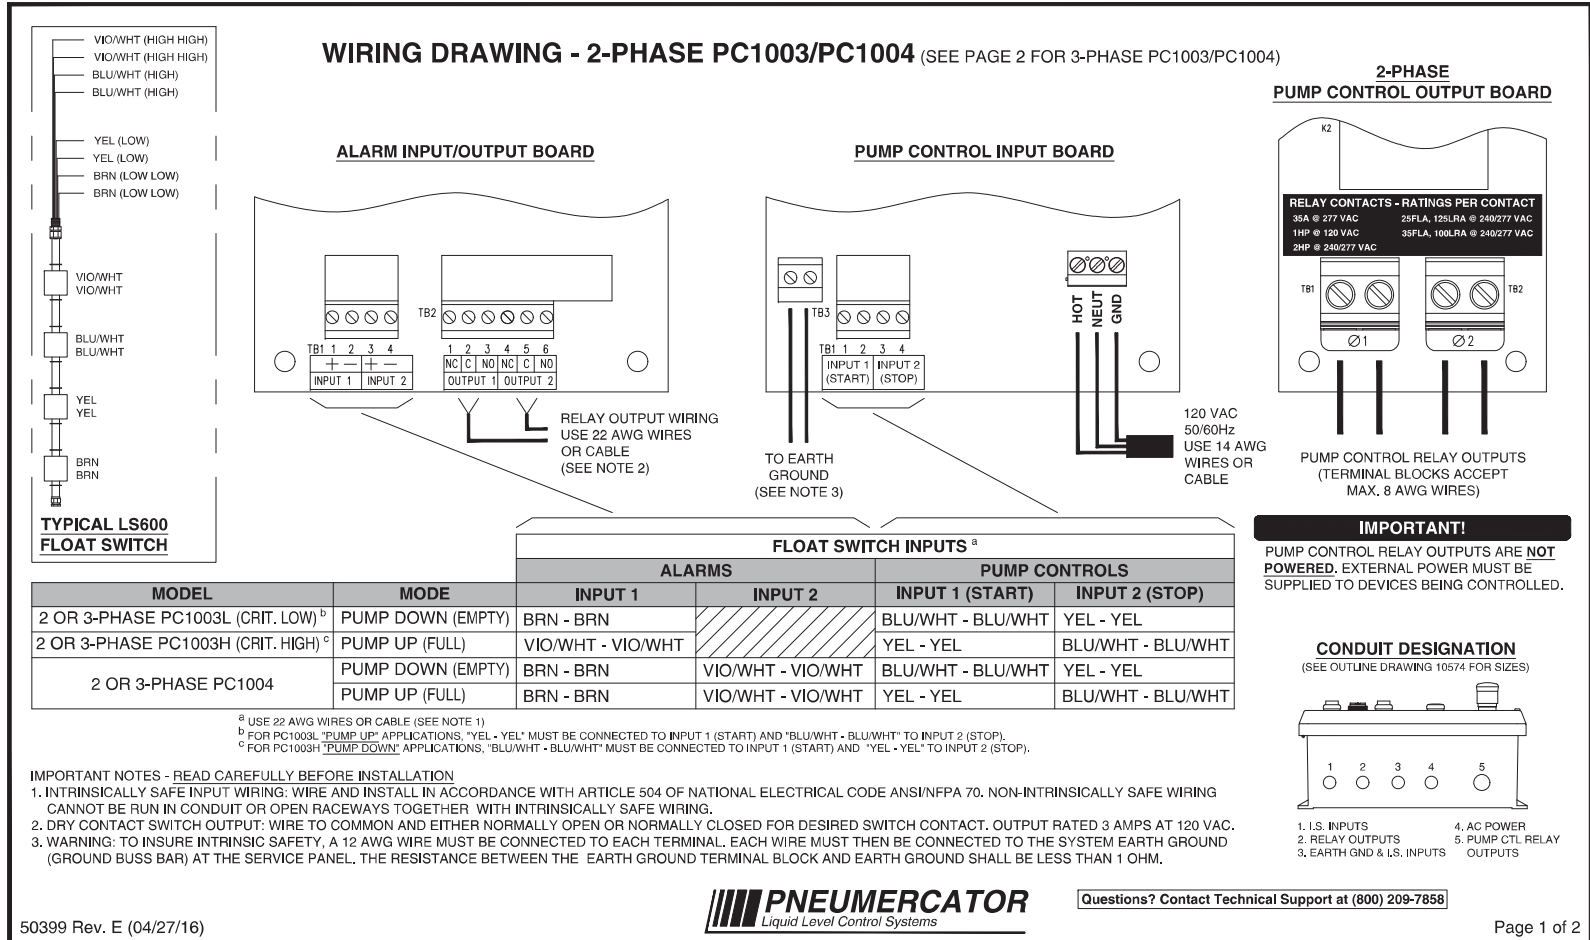


Figure 3-5 – PC1003-3P / PC1004-3P Wiring Diagram

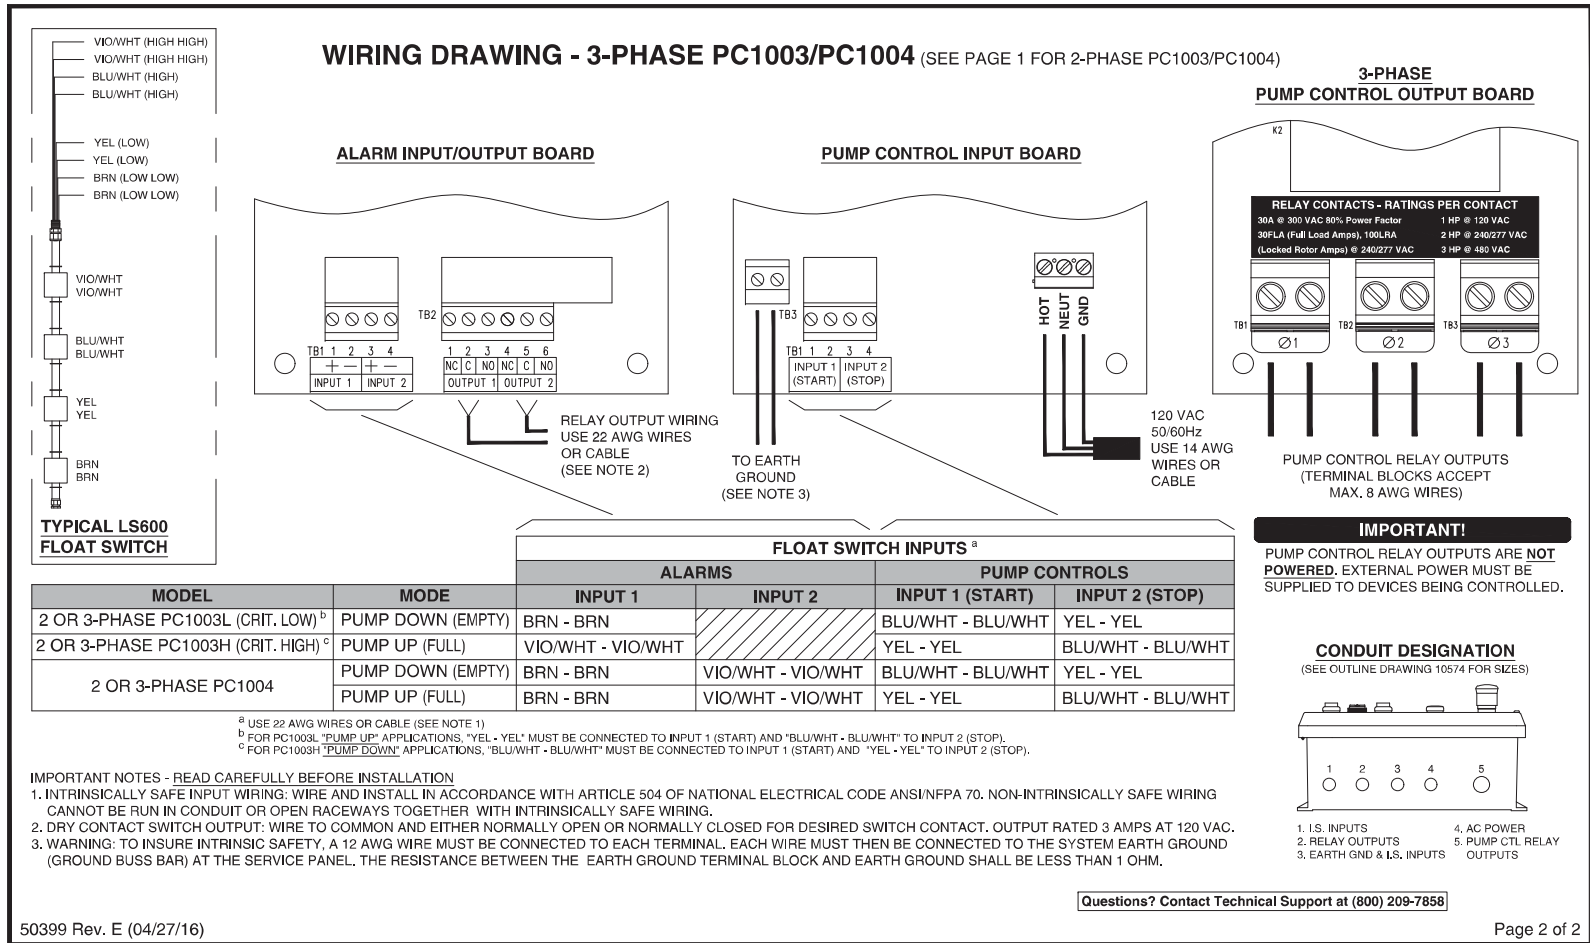

9. Connect sensor wires to the PC1000 INPUT TERMINALS following the matching diagram in Figures 3-2 through 3-5. The terminal blocks may be removed for ease of wiring by pressing down toward the conduit openings. Note that for PC1003/4 consoles, power need only be wired to the Pump Control Input Board. Maintain correct polarity between wires and respective terminal points.
10. Properly dress all wires inside the wiring sections and re-install the protective aluminum cover over the terminals.
11. Sensors should be logically identified as to location and type and recorded on the Sensor map provided in this manual, SECTION 3.3.

⚠ CAUTION

Sensor wires are to be connected ONLY to the designated input terminals of the INTRINSIC SAFETY compartment. DO NOT allow sensor wires to cross over into the non-intrinsically safe section. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

⚠ CAUTION

Relay output terminals are located on the NON-INTRINSICALLY SAFE side of the console. ALL wiring to these terminals MUST enter through the designated conduit opening. Refer to FIGURE 1-4. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

3.3 SENSOR MAP/SYSTEM SETUP

The sensor map/system setup below should be completed by the electrical installer as each sensor and control output function is wired to the PC1000 system. This will provide the equipment operator a means of identifying each field device for proper system setup and use. The SENSOR MAP/SYSTEM SETUP should be adhered to or kept near the PC1000 console.

SENSOR MAP/SYSTEM SETUP

| CHNL | LEAK INPUT USAGE | SENSOR |
|---------|------------------|--------|
| Start | | |
| Stop | | |
| Alarm 1 | | |
| Alarm 2 | | |

| RELAY | ALARMS | USAGE |
|---------|--------|-------|
| Alarm 1 | | |
| Alarm 2 | | |

3.4 INSTALLATION AS A REMOTE PUMP CONTROL PANEL

The design of the PC1000 allows this system to be used as a remote pump control panel to another system equipped with dry contact outputs. These outputs can be monitored by the PC1000 so as to control the pump for the same condition as the main system has detected. If the PC1000 is used in this application, then permanently remove the intrinsically safe (IS) cover by removing the two screws holding down the cover. This identifies this particular installation as a non-intrinsically safe application. Do not install intrinsically safe wires on an PC1000 without the IS cover installed.

A single pair of wires per signal would connect the main system via the dry contact output to the PC1000 on the Switch input.

All Pneumercator systems equipped with relay outputs are considered dry contact, or outputs without power. Other equipment manufacturers may use powered relay outputs. Consult the system manufacturer to determine if the system is equipped with outputs that are dry contact that can be used to represent the desired alarm condition.

⚠ CAUTION

DO NOT CONNECT POWER TO THE DRY CONTACT SENSOR INPUTS OF THE PC1000. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

SECTION 4 OPERATION

4.1 GENERAL

The PC1000 Pump Control System operates by latching on the Pump Control Load Relay when the Start input is true and will remain activated until the Stop input is true. A manual override switch is provided for on-demand control of the pump. This override switch will not activate the Pump if the Pump Stop signal is true. An Emergency Stop button is provided to disable the pump should a critical situation arise. The Emergency Stop button will need to be disengaged to resume normal site operation.

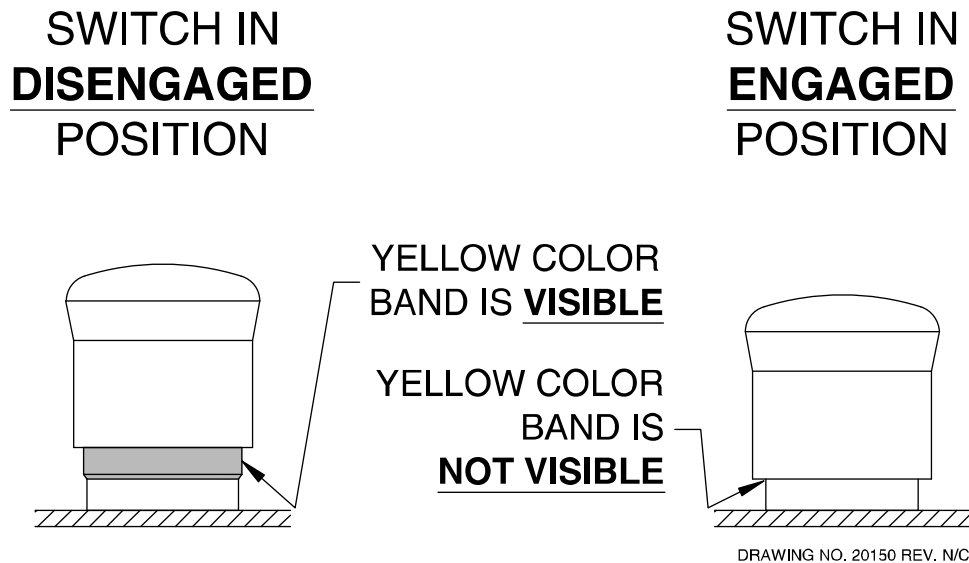


Figure 4-1 – PC1000 Emergency Stop Switch

PC1003/4 systems provides input(s) for Critical High and/or Critical Low conditions. When an alarm is detected: a light comes on, a horn annunciates and a relay changes state. The horn may be silenced by pressing the RESET button, but the light will stay on and the relay will remain in the alarm state as long as the field sensor remains in the alarm condition, e.g., critical high liquid level. After the alarm condition is corrected, i.e., lowering the liquid level below the level switch setting, the alarm light will extinguish, the relay will return to its normal state, and the horn will automatically reset to the silent state. The behavior of the relay for the reset process can be changed to allow the relay to be returned to the normal state upon acknowledging the alarm (See section 3.1). On multiple sensor consoles, each input switch will actuate the horn and its respective light independent of the other sensor's state or the prior state of the alarm console. NOTE: The TEST button manually energizes the horn, all lights (except Pump On and AC), and all alarm output relays on the console. This is accomplished by simulating all inputs as being in the alarm state. If all inputs are in the alarm state PRIOR to pressing the TEST button, the TEST button will not have any function.

4.2 HORN CONTROLS (PC1003/4 ONLY)

In addition to silencing the horn by pressing the RESET button, the Loudness Level may be controlled by using a louver on the horn face from about 86 decibels to about 50 decibels.

SECTION 5 TROUBLESHOOTING

5.1 GENERAL

The On/Off switching control operation of the PC1000 makes it simple to test and troubleshoot the system. Pressing the TEST button performs a functional test of the horn, Critical High, High, Low, and Critical Low indicator lights and all alarm relay contacts. Before pressing TEST, make sure all externally controlled devices are on standby or are accordingly addressed. Also, make sure that at least one input is not in alarm for the Test button to properly simulate all inputs being in alarm.

The input wiring can be disconnected to check the functioning of the inputs as well as to allow access to the wiring to perform a continuity test. If the wiring is disconnected, all of the lights are expected to turn off. To test the system, Use a jumper wire to simulate an open and closed state across the input and observe the behavior of the corresponding system light. A DC voltage measurement may be taken across the input to verify the presence of approximately 12VDC. If there is no voltage present with the wires disconnected from the input, then check the internal fuse with your ohmmeter while the AC power is shutoff from the circuit breaker.

To check the operation of the PC1000 from a field wiring location, e.g., at the field sensor location, simply place a jumper wire between the field wire pair. This action will set the PC1000 into the alarm mode. If this works as expected, then the wiring is intact.

All sensors can be tested with a continuity meter. By manipulating the float by hand, the state of the sensor changes and would be detected by the meter.

5.2 SPARE PARTS LIST

| Description | Part # |
|-------------------------------------|---------------|
| PC1002-2P Main Board Set | 900631-1 |
| PC1003-2P Main Board Set | 900632-1 |
| PC1004-2P Main Board Set | 900632-2 |
| PC1000-2P Pump Control Output Board | 900576-1 |
| PC1002-3P Main Board Set | 900710-1 |
| PC1003-3P Main Board Set | 900711-1 |
| PC1004-3P Main Board Set | 900711-2 |
| PC1000-3P Pump Control Output Board | 900644-1 |
| Fuse (0.1A Slow Blow) | 553615-4 |
| Annunciator (Horn) | 553503-1 |
| Red LED Assy | 553636-1 |
| Green LED Assy | 553636-2 |
| White LED Assy | 553636-3 |

SECTION 6 MAINTENANCE/TESTING

6.1 CONSOLE

The operation of the PC1000 alarm lights, horn, and alarm output relays can be verified by holding down the TEST button. The TEST button causes all alarm conditions for the system to go to the alarm state. For this reason, it is best to do this with at least one alarm condition in the normal state otherwise your horn will not activate since there are no new alarm conditions detected. If the lights and horn do not activate as expected, follow the troubleshooting instructions found in Section 5.

There are no consumables for the PC1000 therefore no parts need to be changed on a regular basis. Refer to section 5 for a list of service parts available to repair the PC1000.

6.2 SENSORS

The sensors themselves cannot be tested from the front panel of the PC1000. Instead the sensor must be removed and each float manipulated by hand to simulate an alarm condition. The only exception to this rule is in the case of the LS600 equipped with a test lever. This test lever allows for the testing of the uppermost float, typically used as the overfill protection. See Bulletin 193 for details on the LS600 Series sensors.

⚠ WARNING

Testing MUST be done by qualified personnel familiar with local wiring codes and explosion hazard electrical safety practices. FAILURE TO COMPLY MAY RESULT IN PERSONAL INJURY, PROPERTY LOSS AND EQUIPMENT DAMAGE.

It is generally considered good practice to ensure that your system is fully operational on an annual basis. For thicker or more viscous liquids, inspect the system more frequently to confirm that no product has built up on the sensor so as to interfere with its proper operation. Your local regulations may require testing based on a different schedule so consult with your regulator/inspector for the frequency of testing needed for your application.

WARRANTY

We warrant that our tank gauges, if installed according to instructions will be free from defects in material and workmanship for a period of one (1) year following the date of original shipment by us.

Our liability under this warranty shall be limited to, at our option,
(i) repair of the defective tank gauge,
(ii) replacement of the original tank gauge with new, or
(iii) refund of the original purchase price;
and, we shall not be liable for any labor, other installation costs, indirect or consequential damages, or other damages in connection with such gauge.

This constitutes our obligation and none other stated for any purpose except the above shall apply.

Contact Pneumercator for detailed warranty documentation.

REVISION 101008



Pneumercator Co.
1785 Expressway Drive North
Hauppauge, NY 11788
TEL:(631) 293-8450 FAX:(631) 293-8533
www.pneumercator.com

Distributed by: